


8 Day Timer

MODEL NO.

23002

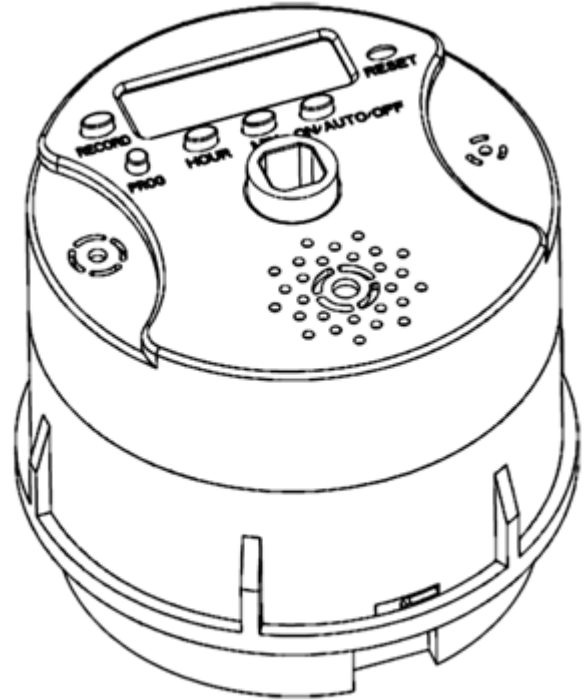

Model and serial number may be found at the rear of the 8 Day Feeder base.

Please record both model and serial number in a safe place for future use.

Where Purchased : _____

Date purchased : Month _____

: Day _____

: Year _____

Model No. : _____


Serial # : _____

This Owner's Manual contains information for all models.

Read and keep this manual for future reference.

This manual contains important information on Safety, Assembly, Operation and Maintenance.

TIMER PROGRAMMING

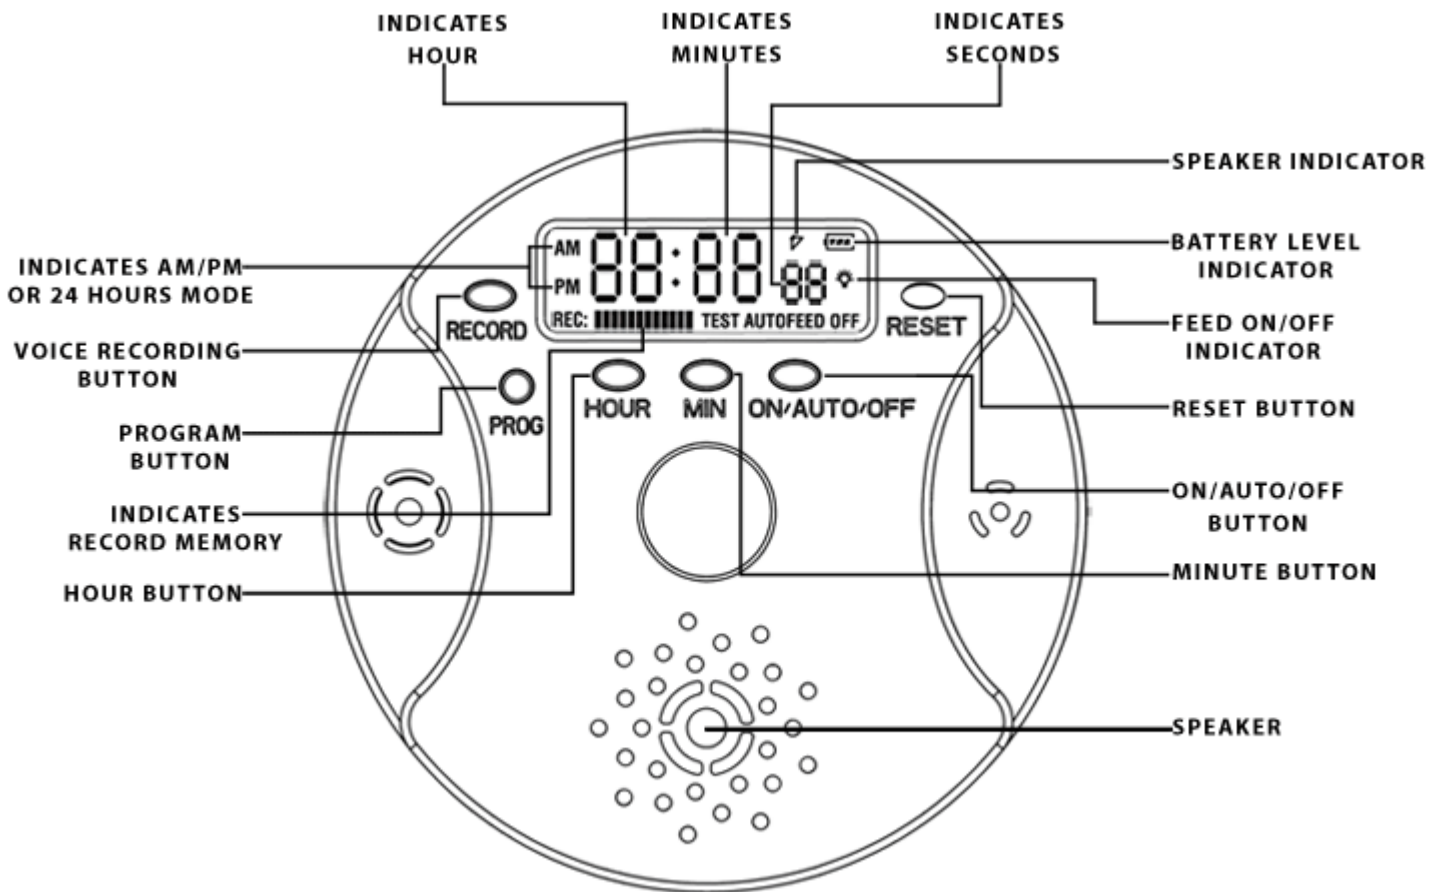

This is the Digital Timer unit for 8 Day Autopet Feeder. The timer works on 3 AA batteries. With this Digital Controller Module you can record your voice which will be played back every meal time. Records your voice up to 7 Seconds.

NOTE:

- Remove bowl cover to program the timer.
- Press RESET button prior to programming the timer. Use 3 AA Batteries. Do not mix old and new batteries.

1.0 Setting the time mode : 24 hour (military time) or 12 hour AM/PM MODE



Fig 1

- Press the **HOUR** and **MINUTE** button simultaneously to activate 12 hour or 24 hour program mode. The display will begin to flash.



Fig 2

- Press the **PROGRAM** button to switch from the present mode to the next mode
i.e. from 24 hour to AM/PM or AM/PM to 24 hour mode.

1.1 Setting the Current Time



Fig 3

- Press the **HOUR** and **MINUTE** button simultaneously to activate the setting mode.



Fig 4

- Press the **HOUR** button to set the **HOUR**.



Fig 5

- ❑ Press the **MINUTE** button to set the **MINUTE**.



Fig 6

- ❑ Press **ON/AUTO/OFF** button to go back to clock mode.

NOTE: The seconds setting cannot be altered.

1.2 Understanding the Timer

- ❑ The autopetfeeder is capable of feeding your pet up to 8 times per day. You can set the time for the feeder up to 8 times per day. This will give you control over the amount of food you feed your pet and also the time your pet is fed. By pressing the **PROGRAM** button you will enter the programming mode. The display will now show 1. At this time the feeder will turn ON and after the cover rotates 45 degrees, the feeder will turn off.
- ❑ The pet feeder is capable of feeding both dry and canned food and pet meds.

1.3 ON/AUTO/OFF

- Now let us understand the different modes of operation in the timer.



Fig 7

- Press **ON/AUTO/OFF** button to toggle between **TEST**, **AUTO** and **OFF** mode. The display will show the mode in which the timer is set



Fig 8

- In **TEST** mode the bowl cover rotates 45 degree and enters the next feed compartment.



Fig 9

- In **AUTO** mode the feeder works as per the programmed schedule.



Fig 10

- ❑ In **OFF** mode the feeder does not work.

1.4 Setting the Program Mode

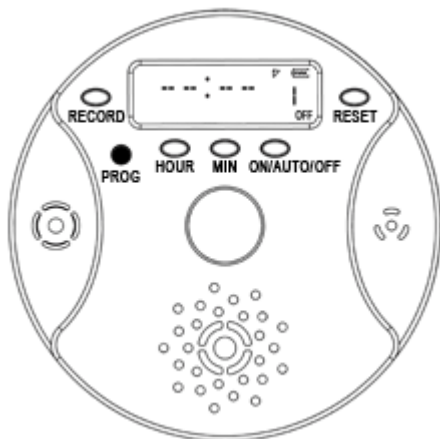


Fig 11

- ❑ Press the **PROGRAM** button to enter into program mode. The display will show 1 which means that we are setting the 1st schedule.

1.5 Timer Programming Examples:-

- ❑ Let us set a schedule for 7.10 am.



Fig 12

- ❑ Press the **HOUR** button till the display shows **7 AM**

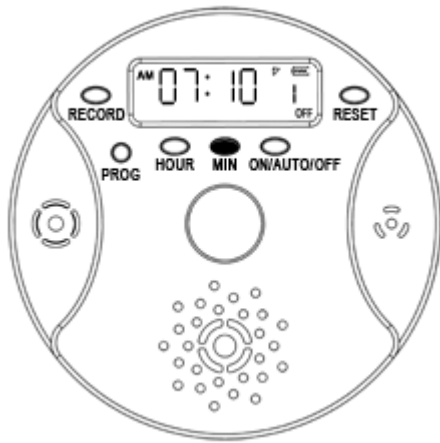


Fig 13

- Press the **MINUTE** button till the display shows 10.

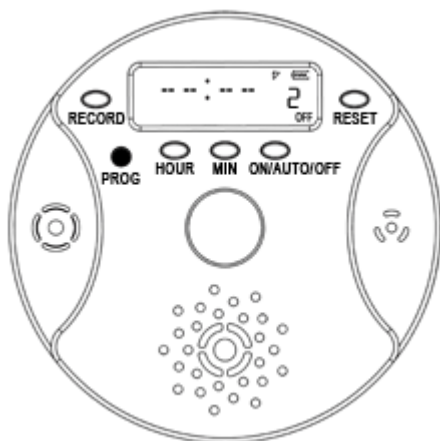


Fig 14

- Press the **PROGRAM** button again and the display will show 2 which means that we are setting the second feed time.

PROGRAM TO FEED CHART

No of Programs	No of Feeds / Day							
	Day 1	Day 2	Day 3	Day 4	Day 5	Day 6	Day 7	Day 8
1	1	1	1	1	1	1	1	1
2	2	2	2	2				
3	3	3	2					
4	4	4						
5	5	3						
6	6	2						
7	7	1						
8	8	0						



Fig 15

- Press the **PROGRAM** button again to exit from the program mode to **CLOCK** mode.

NOTE:

To exit out of program mode press **PROGRAM** button until you see the **CLOCK** mode appear.

1.6 Recording Voice



Fig 16

- Press the **RECORD** button to record your voice, a record time bar will appear on the display which indicates the memory level.. You can record up to 7 seconds.



Fig 17

- Press the **ON/AUTO/OFF** button until the timer display shows **TEST**, to play back the recorded voice in the **TEST** mode. This is used to test the voice recording & demonstrates the function of the timer.

1.7 Setting Feeder in Auto Mode



Fig 18

- Press the **ON/AUTO/OFF** button until the display shows **AUTO**, to set the feeder in **AUTO** mode.

Now the 8DAY TIMER is ready to use.

Corporate Office

Ergo Systems Inc.,
1105 S. WestWood Ave,
Addison,
IL 60101.

E-Mail

contact@autopetfeeder.com

Toll-Free Phone. US only

1-888-ERGOSYS
(1-888-374-6797)

Website

<http://www.autopetfeeder.com>

International Phone

1-630-543-7686



Warranty Registration

<http://www.autopetfeeder.com/warranty.asp>

Fax

1-630-839-3321